



PUNGULITA

|            |     |     |     |     |
|------------|-----|-----|-----|-----|
|            |     |     |     |     |
| BAZA 700   | x 2 |     | x 4 | x 4 |
| BAZA 900   | x 2 |     | x 4 | x 4 |
| BAZA 1200  | x 2 | x 2 | x 2 | x 6 |
| COMPONENTA | x 2 |     | x 4 | x 4 |


INSTRUMENTE NECESARE

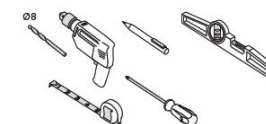



GAURIRE PERETE

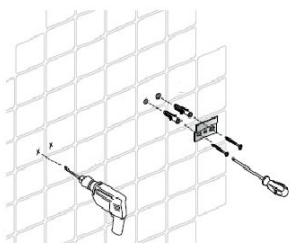


REGLAJ SISTEM SUSPENDARE

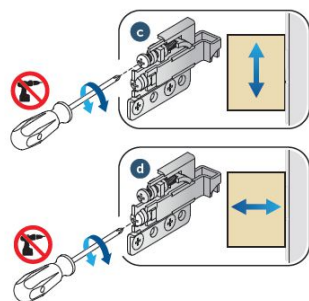


COLTAR SUPLIMENTAR LA BAZA DE 1200

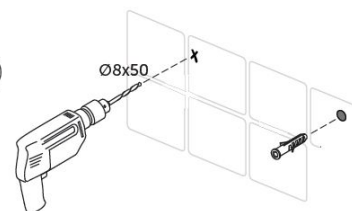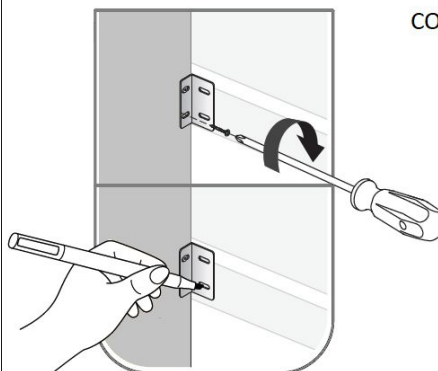




Montarea sertarelor la loc

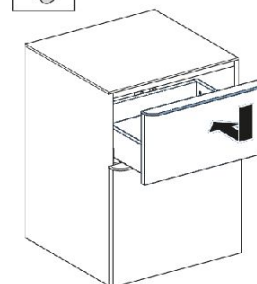


Scoaterea sertarelor  
pentru suspendarea  
pe perete a corpului

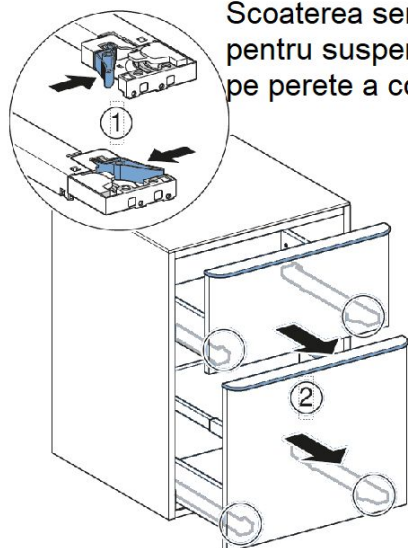


COTE GAURIRE PERETE

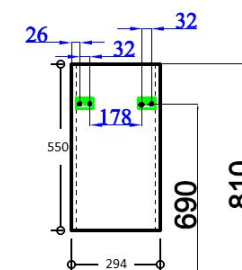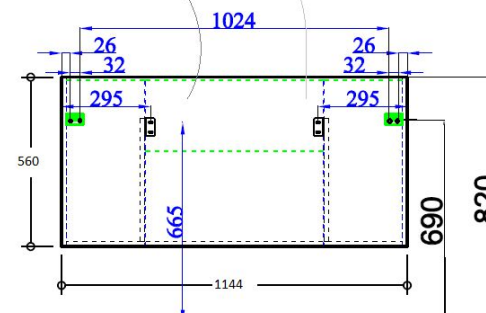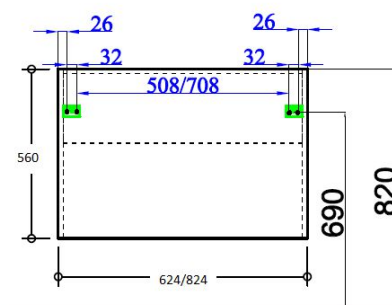


## INSTRUCTIUNI MONTAJ COLOANA MARE

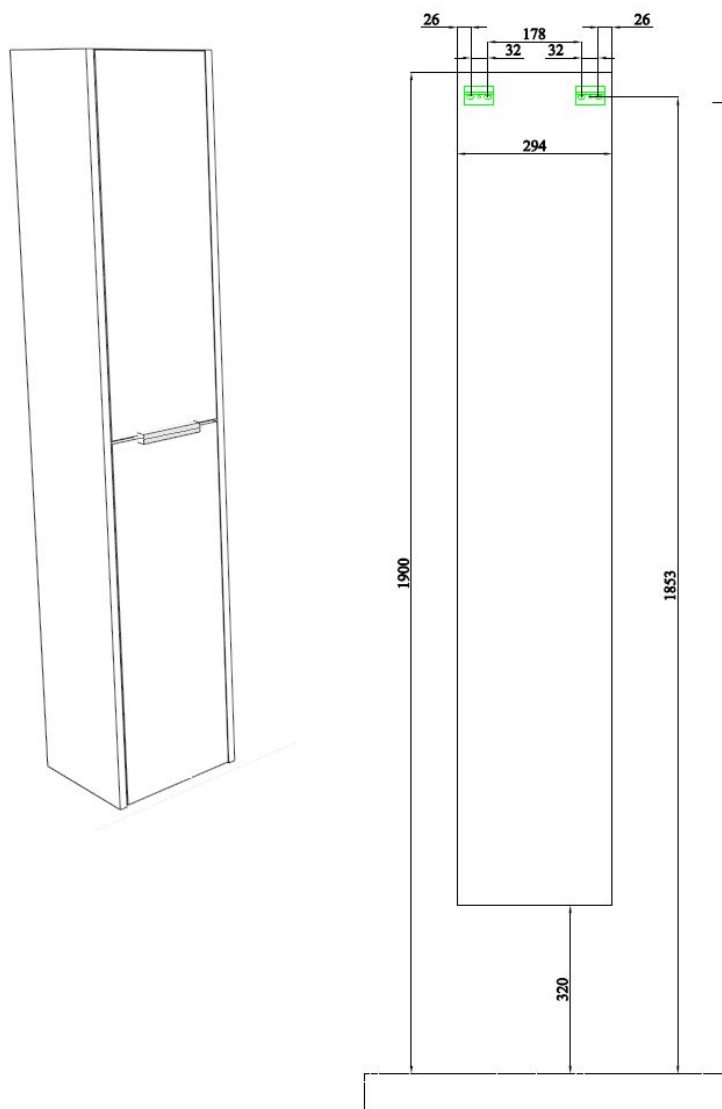


Gaurire perete

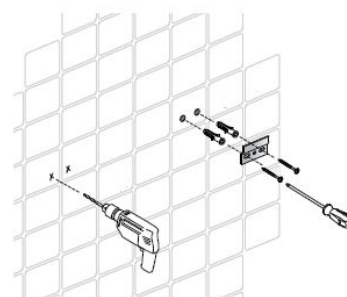


Reglaj sistem suspendare

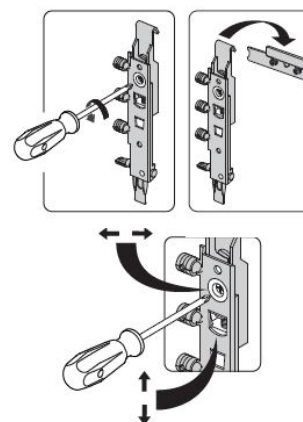


Pungulita

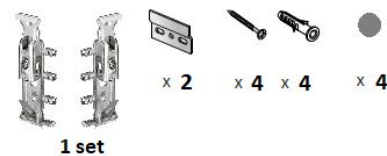


INSTRUMENTE NECESARE

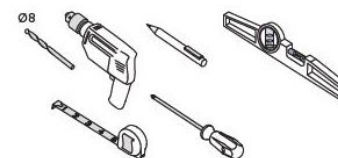



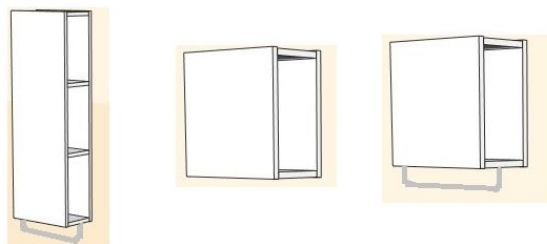


|                         |     |     |     |     |     |
|-------------------------|-----|-----|-----|-----|-----|
| Pungulita               |     |     |     |     |     |
| COLOANA                 | x 3 | x 1 | x 4 | x 6 | x 6 |
| CUB                     | x 3 |     |     | x 6 | x 6 |
| CUB cu suport<br>prosop | x 3 | x 1 | x 4 | x 6 | x 6 |


**Instrumente necesare**

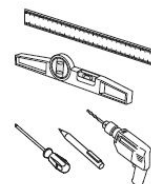


**SUPOORT PROSOAPE - PUNCTARE/PRINDERE LA FATA LOCULUI**

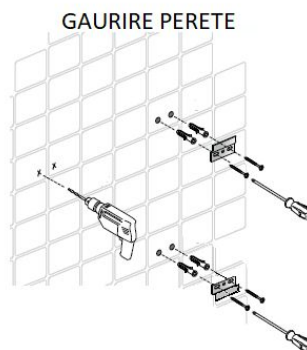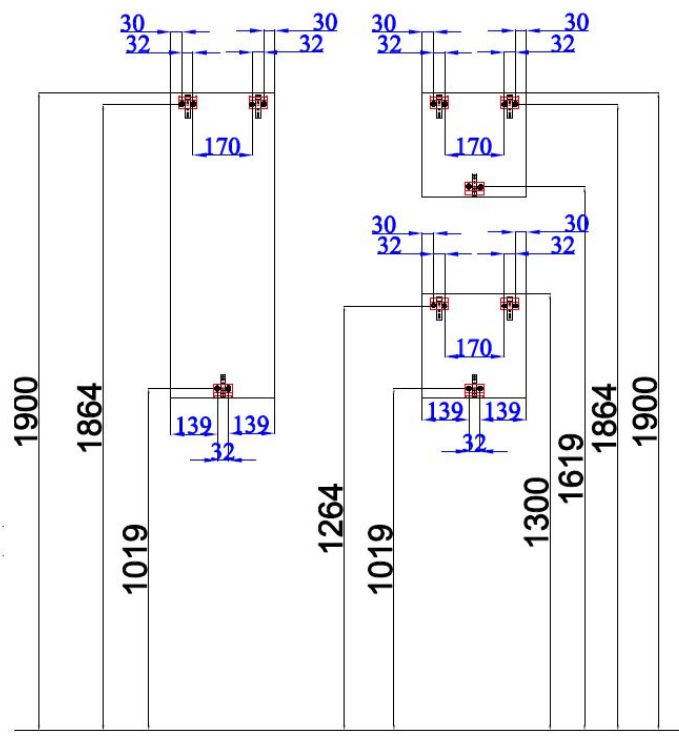

**REGLAJ SISTEM SUSPENDARE**


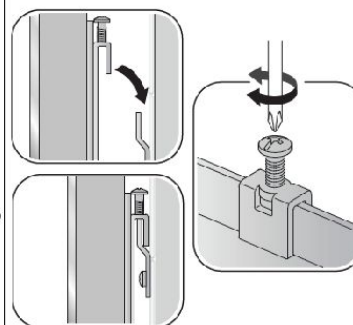


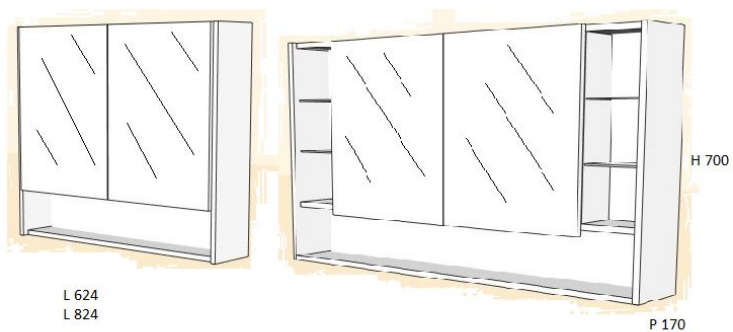


Pungulita

|      |     |     |     |     |
|------|-----|-----|-----|-----|
|      |     |     |     |     |
| 700  | x 2 | x 4 | x 4 | x 2 |
| 900  | x 2 | x 4 | x 4 | x 2 |
| 1200 | x 2 | x 4 | x 4 | x 2 |

INSTRUMENTE NECESARE

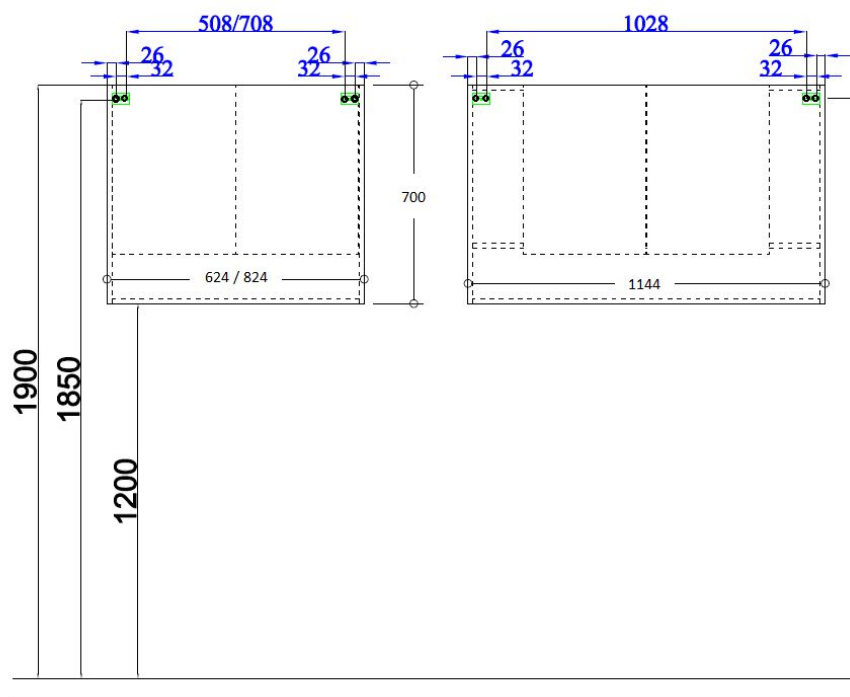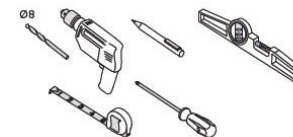

Gaurire perete

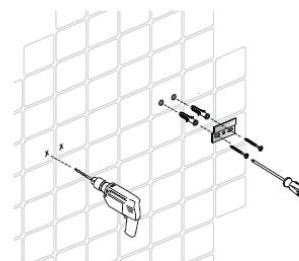

Reglaj sistem suspendare

